



# CENTRAL

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

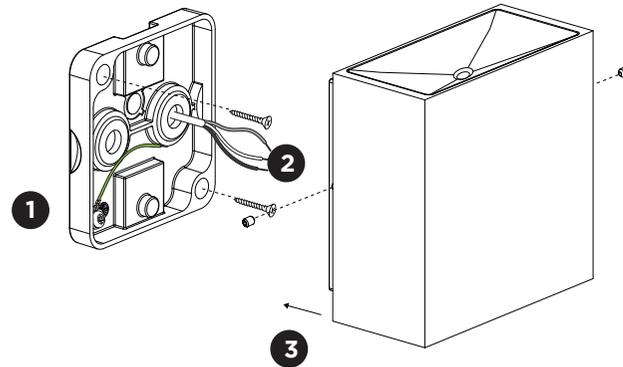


Mounting base:

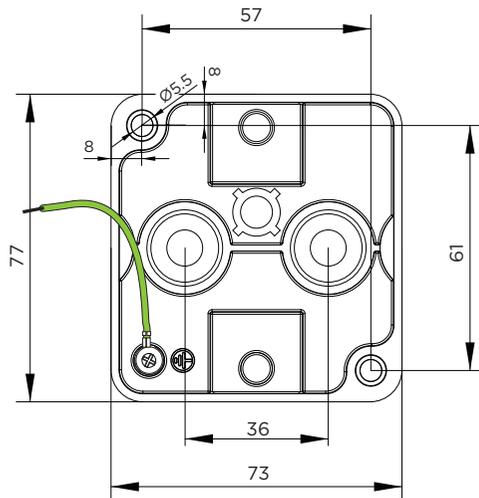

grommets:

	A	B	C
CABLE			
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm <sup>2</sup> 2or3x 1.0mm <sup>2</sup> 2or3x 1.5mm <sup>2</sup>	2or3x 0.75mm <sup>2</sup> 2x 1.0mm <sup>2</sup>	0.75mm <sup>2</sup> 1.5mm <sup>2</sup>

## DIMENSIONS

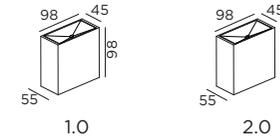


## MOUNTING INSTRUCTION

**1** Remove the mounting base from the luminaire by loosening the side screws and mount it on the wall with screws (screws are not included).

## **2** POWER CONNECTION


Connect to 220-240V

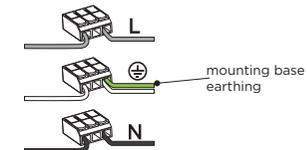

Connect the earth cable.



Please use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.


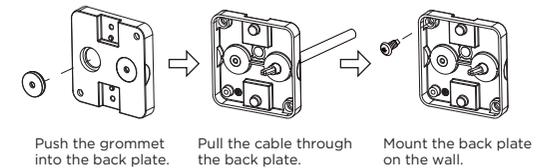


**3** Fix the luminaire to the mounting base with the side screws.



# CENTRAL

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

indoor version:

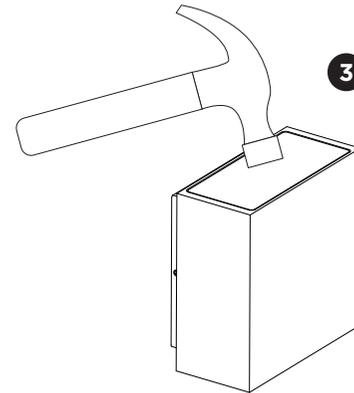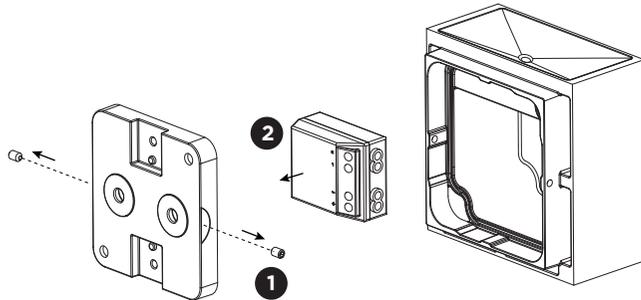


outdoor version:

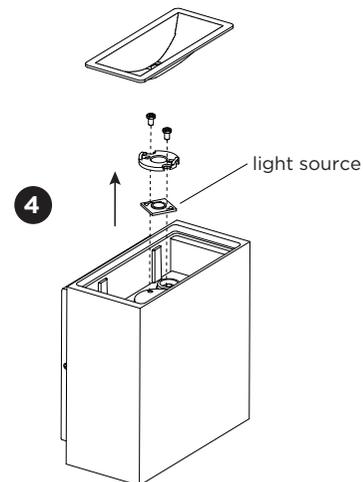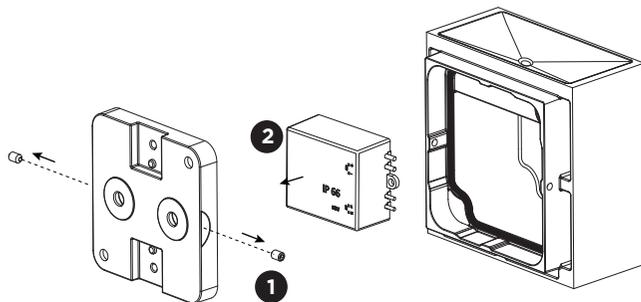


## DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

- 1 Loosen the side screws and remove the lamp housing from the mounting base.
- 2 Loosen the wires and remove the driver.
- 3 Break the glass.
- 4 Take out the components, unscrew the COB holder and remove the light source.

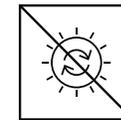

The light source is not replaceable.

 

The driver can be replaced by the end user.



This luminaire contains a light source with the energy class F.



**WEVER & DUCRÉ**  
LIGHTING

**WEVER & DUCRÉ BV**  
Spinnerijstraat 99/21, 8500 Kortrijk, Belgium  
weverducre.com