

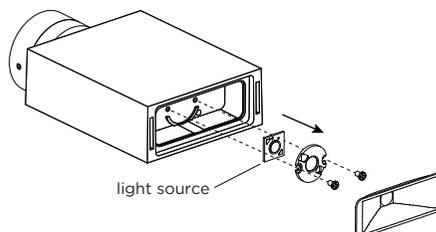


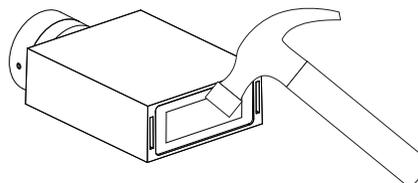

# STAKE

 
INSTALLATION INSTRUCTIONS | NOVEMBER 2022

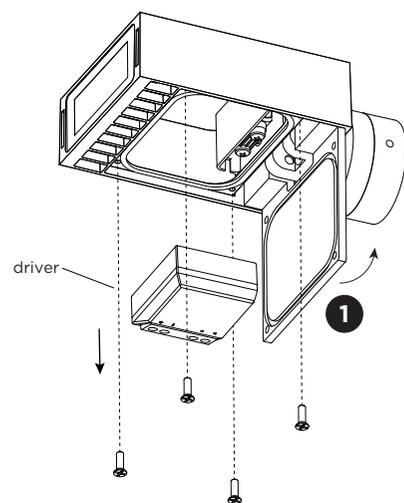


## DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

- 1 Loosen the screws and tilt the cover.
- 2 Remove the driver by loosening the cables.
- 3 Break the glass.
- 4 Take out the reflector and unscrew the light source.



 The driver can be replaced by the end user.



The light source is not replaceable.



This luminaire contains a light source with the energy class F.