


MATCH ceiling recessed

INSTALLATION INSTRUCTIONS | NOVEMBER 2023

installation for 1.0 / 2.0

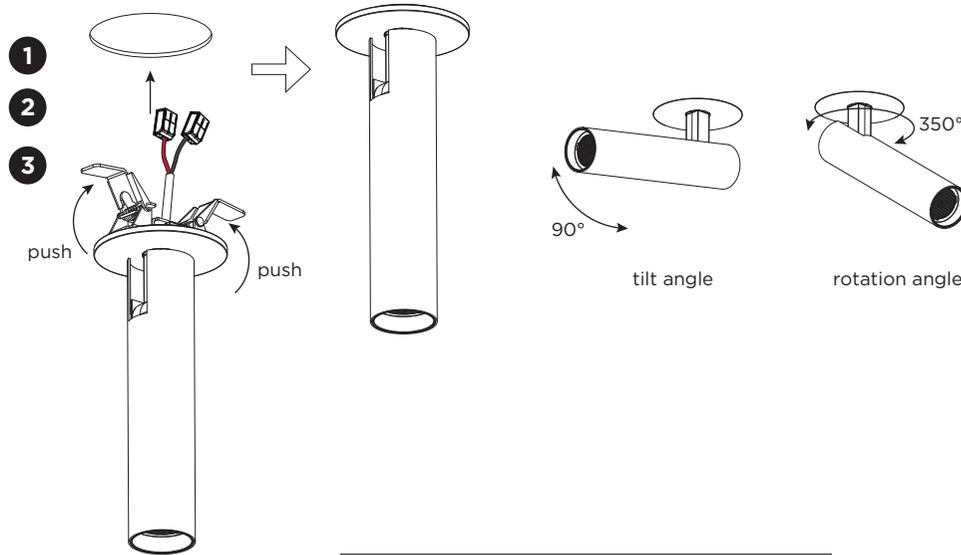


Only to be installed outside arms reach.




Driver must be powered off before connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



- For the spring version: push the springs upward and insert the fixture in the ceiling hole.
For the blade version: push the blades towards the fixture and insert the fixture in the ceiling hole.

DIMENSIONS

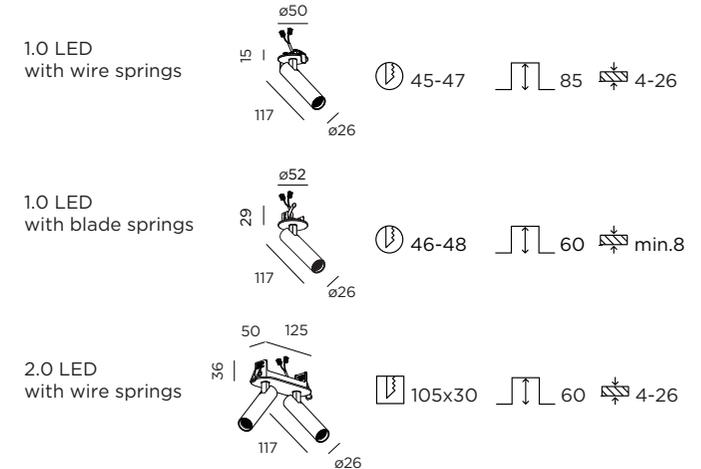


MOUNTING INSTRUCTION

- Make a hole in the ceiling according to the prescribed dimensions.


- POWER CONNECTION

Always use a driver according to the specifications of the LED module.



Single connection



Connect to driver.



Multiple connection

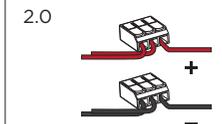


PB19-010-797-00 V2

MATCH ceiling recessed

INSTALLATION INSTRUCTIONS | NOVEMBER 2023


dismounting for 1.0 / 2.0

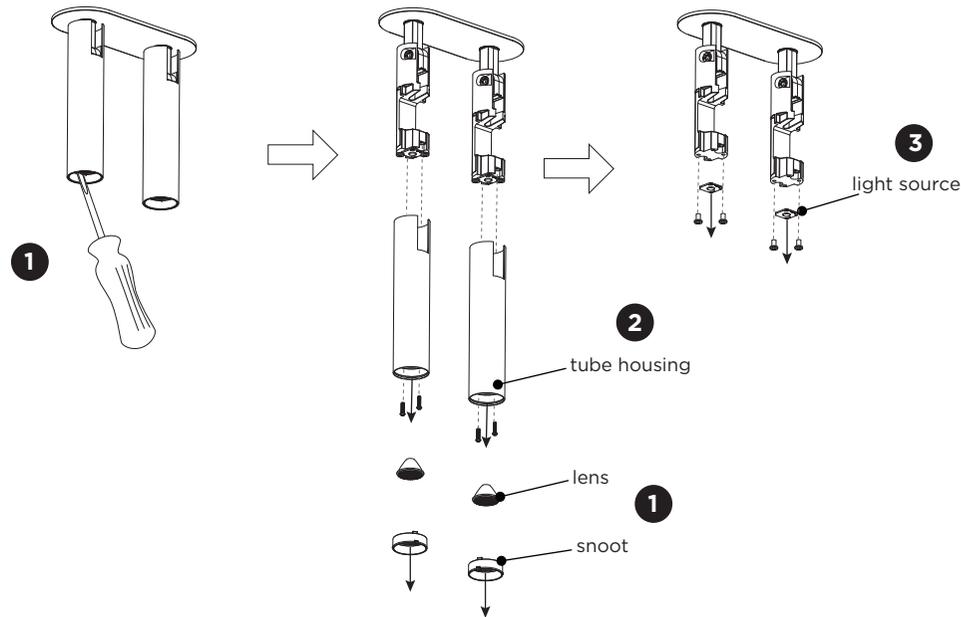

DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source

- 1** Pull out the snoot(s) using any available tools and remove the lens(es).
- 2** Unscrew the screws and remove the tube housing(s).
- 3** Unscrew the screws and remove the light source(s).



The light source is replaceable by an authorized professional.
For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.