


# SOLID PETIT 2.0





INSTALLATION INSTRUCTIONS | APRIL 2023

## DIMENSIONS




## MOUNTING INSTRUCTION

- 1 First assemble the LED module and inset.
- 2 Fix the mounting base to the ceiling with screws (screws are not included).
- 3 Push the springs upwards and insert the luminaire into the tube until it reaches the step.
- 4 **POWER CONNECTION**  
Connect to 220-240V. Connect to the driver.
- 5 Attach the tube to the mounting base by pushing it completely against the ceiling.

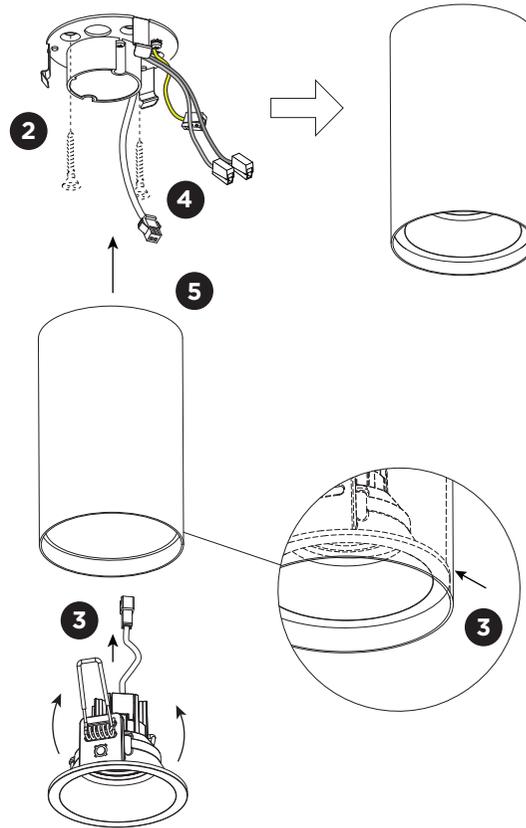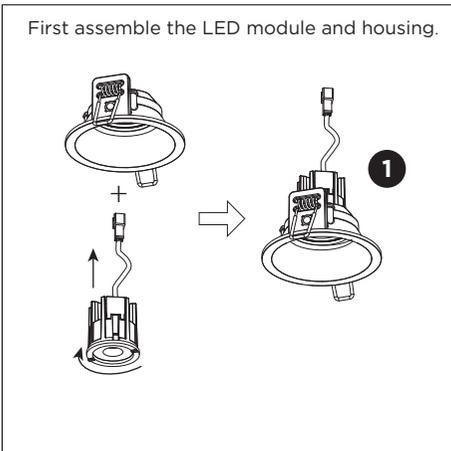


Mounting base:

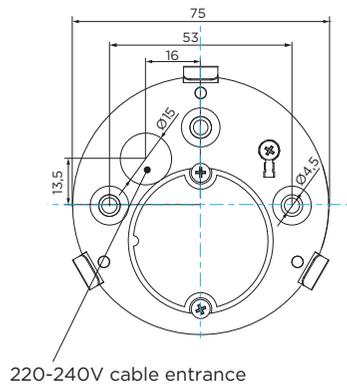


Driver must be powered off before connecting the cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



# SOLID PETIT 2.0


INSTALLATION INSTRUCTIONS | APRIL 2023

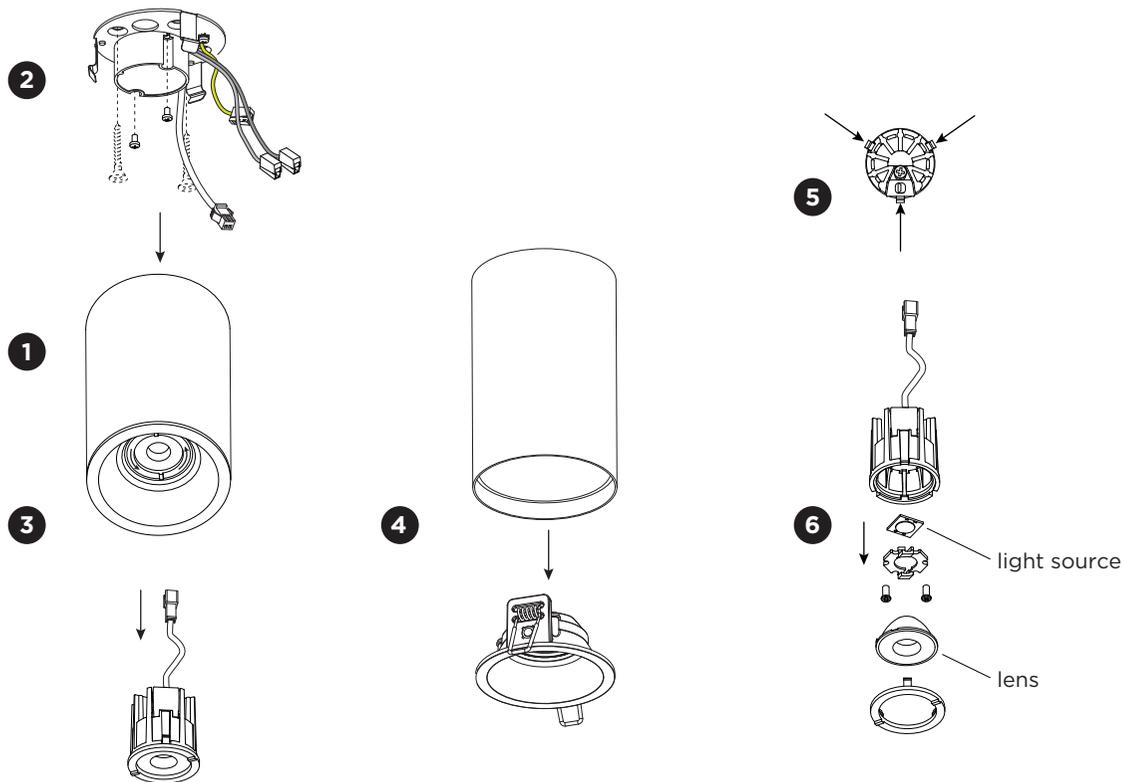

## DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

- 1 Pull down the tube from the ceiling base.
- 2 Unscrew the ceiling base, loosen the wires and remove the driver from the base.
- 3 Hold and turn the front ring counterclockwise to remove the LED module.
- 4 Remove the spot inset from the tube.
- 5 Push at the three points to loosen the front ring.
- 6 Take the lens out and unscrew the light source to remove it.



The light source is replaceable by an authorized professional. For advice contact your Wever & Ducré customer service contact point.



The driver can be replaced by the end user.



This luminaire contains a light source with the energy class E.