



RUVI on track

INSTALLATION INSTRUCTIONS | MARCH 2026

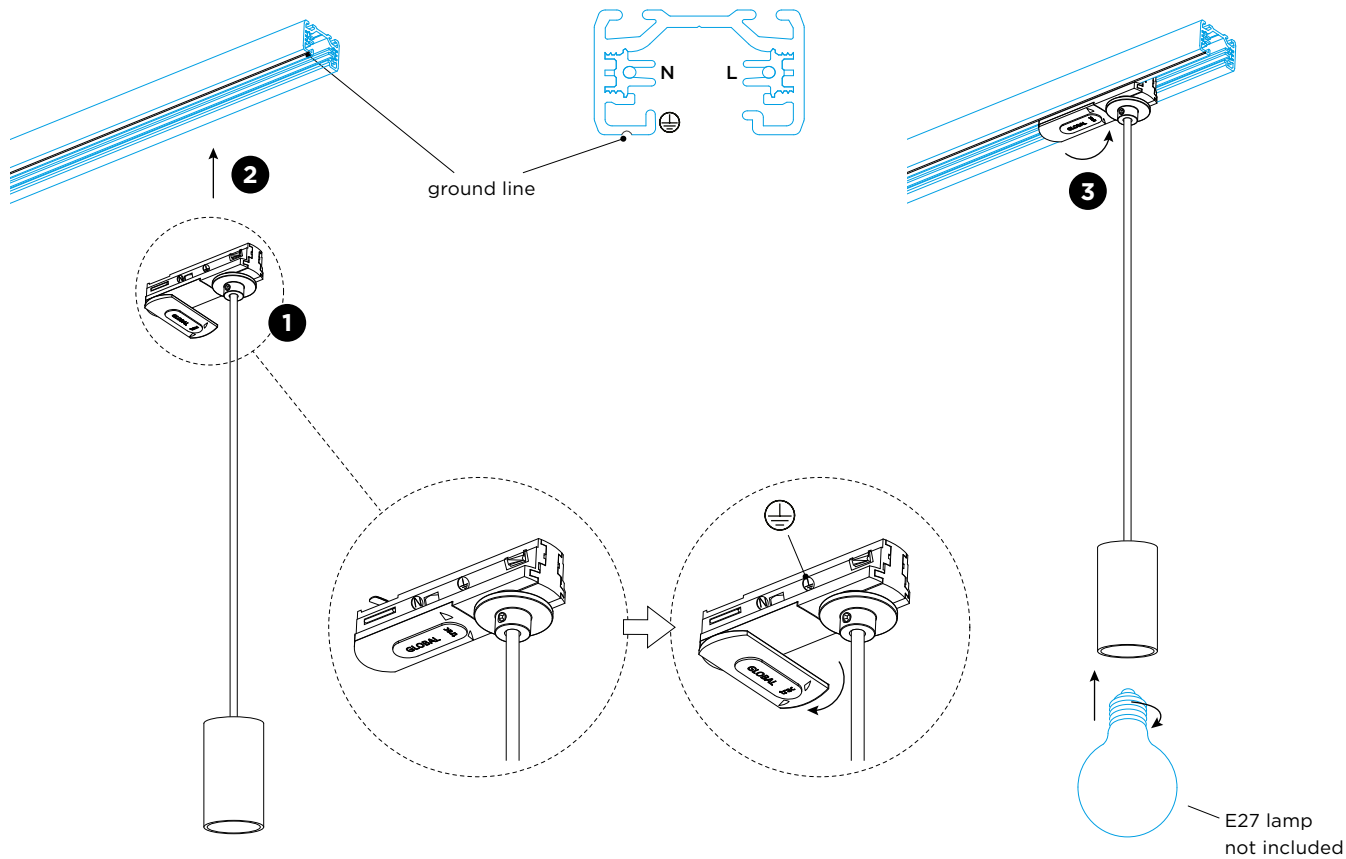


DIMENSIONS

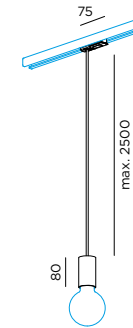

MOUNTING INSTRUCTION

- Turn the handle on the adapter 90° as illustrated.
- Push the adapter into the track. Make sure the $\oplus$ icon on the inside of the adapter is faced towards the track side with the ground line craved in it.
- Turn the handle back into the original position to lock the adapter in the track.

Note: it's not allowed to slide the device in the track. If you want to change the location of the device, please pull the device out of the track and install it on the correct position.

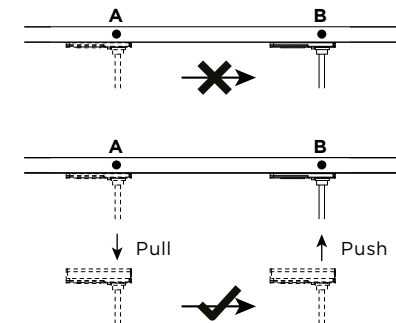

RUVI on track

INSTALLATION INSTRUCTIONS | MARCH 2026

Shorten the cable to the required length.

